

NX⁷

USER MANUAL



N E X T E L E C T R I C M O T O R S

INDEX



BEFORE USE



QUICK SETUP



REMOTE
CONTROL



DISPLAY



BATTERY



APP



COMPONENTS



PROBLEMS



MAINTENANCE



BEFORE USE

01

Thank you for choosing NEXT! The vehicle was designed so that the user can enjoy urban driving. We invite you to read carefully this user manual and we remind you to drive with precaution.

02

Please comply with current road regulations and avoid using your cell phone while driving.

03

Do not use third party parts or spare parts that are not originals for repairs. Avoid forgery any part of the vehicle without authorization, which would invalidate the vehicle warranty.


04

Remember the NX1 delivers power like a pure electric vehicle and you should increase the caution. Once you have full control of your NEXT you won't want any other.


QUICK SETUP




1 Wing mirror

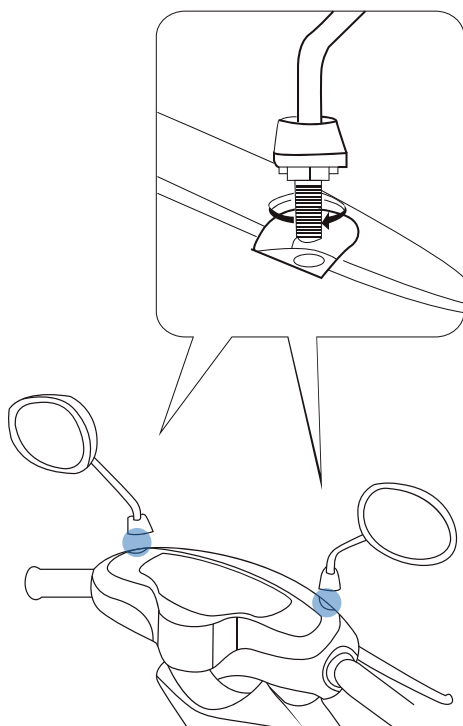


3 Scooter backrest

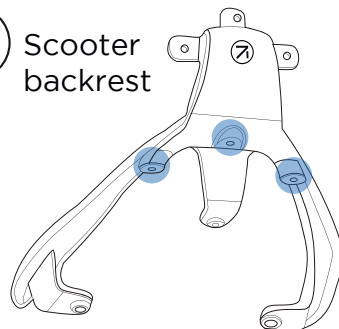

A. The bracket will be mounted on the anchor of the footrest.

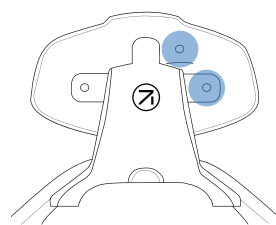


B. The backrest will be mounted on the anchor

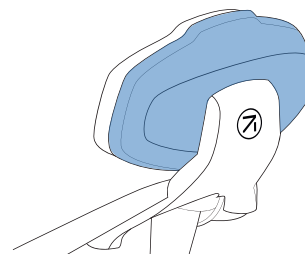


C. Position the back shell on the backrest and use the three supports to stiffen the device

2 Registration Number

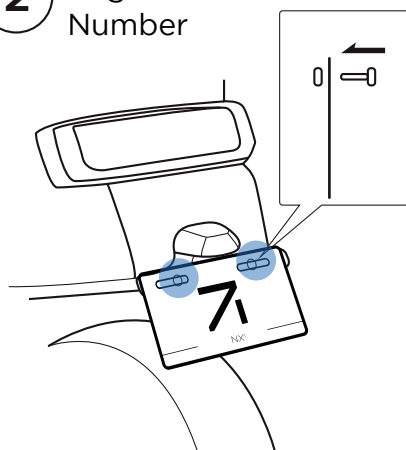

In just two steps, you can start enjoying your NX¹

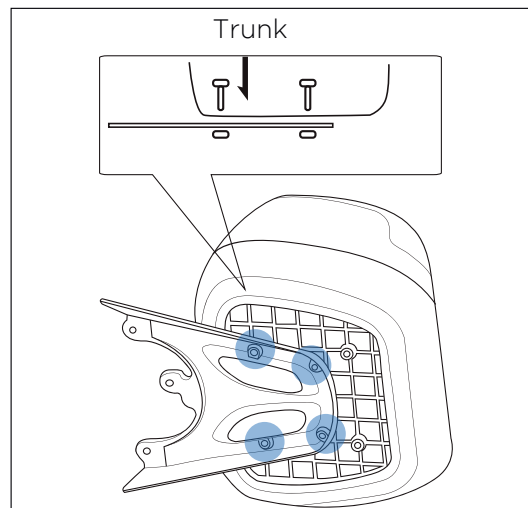


Installation of the safe on the support
Note: the trunk is optional

REMOTE CONTROL




Description of the mechanical lock

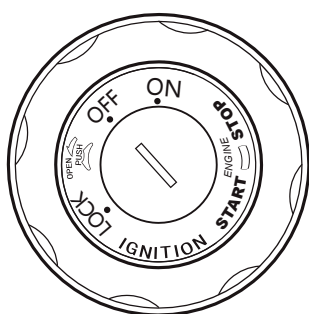


OFF Mode

The vehicle is switched off

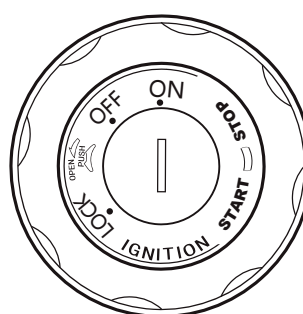


ON Mode

The vehicle is on

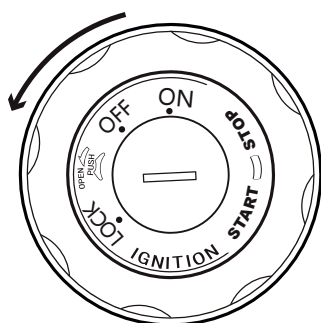

OPEN Mode

Turn left into position
OFF to open the seat.

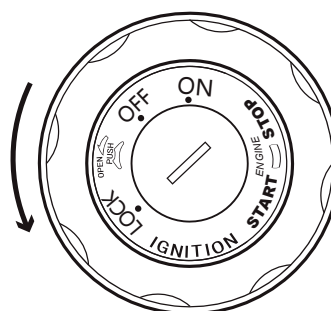

LOCK Mode


Turn counterclockwise from the OFF
position (insert the key to the final
touch) until LOCK to activate the
locking of the direction.



* Remember that the main option is the command to turn on, turn off, unlock and search for a vehicle. The key is then only used for mechanical use to close the steering lock and open the seat.

Description of the mechanical lock


Remote control

The effective control distance can be up to 25m in a straight line..

Make sure the unlock button is ON , then press twice  and when you're ready to go, press the P button, accelerate carefully and enjoy of your NX¹

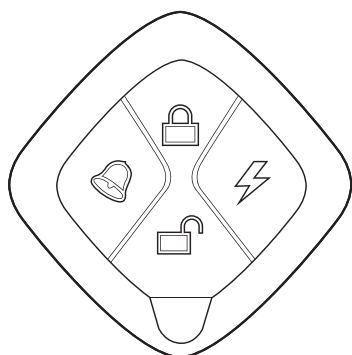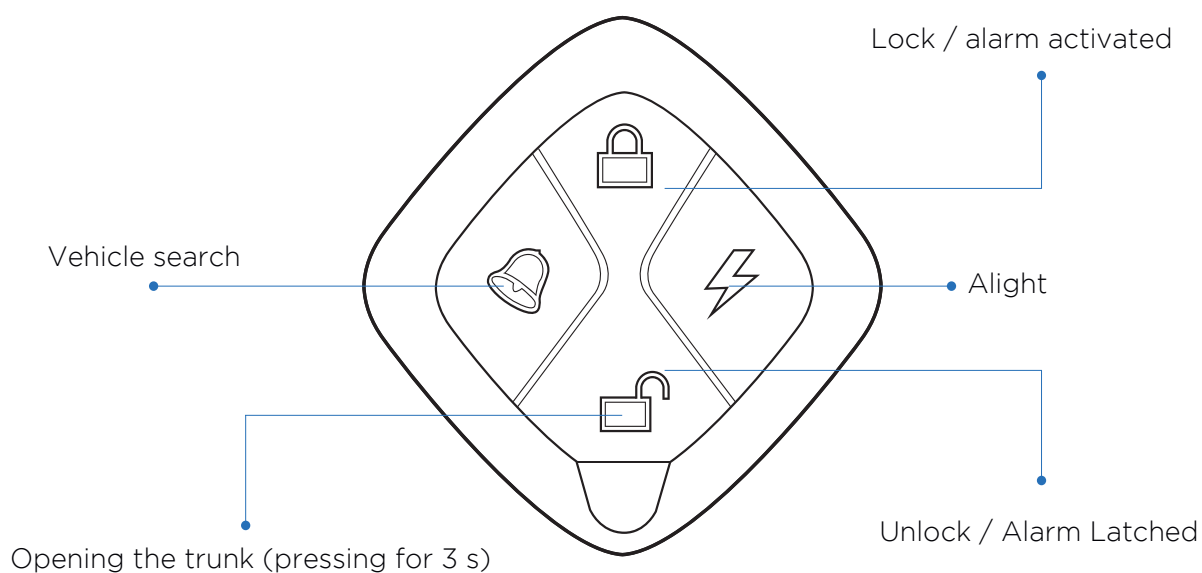



Front position of the remote control

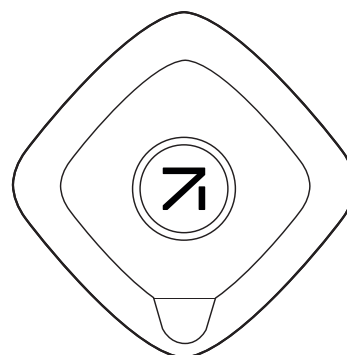

Remote control rear position

Remote control rear position

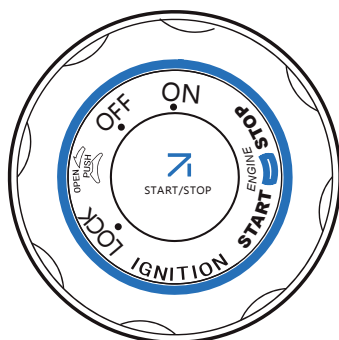


Note: To turn on the NX¹, you can use the mechanical lock or press the button.  START/STOP

If the button on your NX1 does not react, you have the updated version of the connectivity and this function is disabled.

***If you press the open padlock on the remote, remember that if you do not take any other action, NEXT will perform a ringtone and it will go into SLEEP state which refers to the fact that for some reason you forgot to turn off the vehicle. If this happens, the vehicle will lock the engine and you cannot start driving. To solve the problem, you must press the open padlock and again twice on the scratch button on the remote control.**

Remote Control

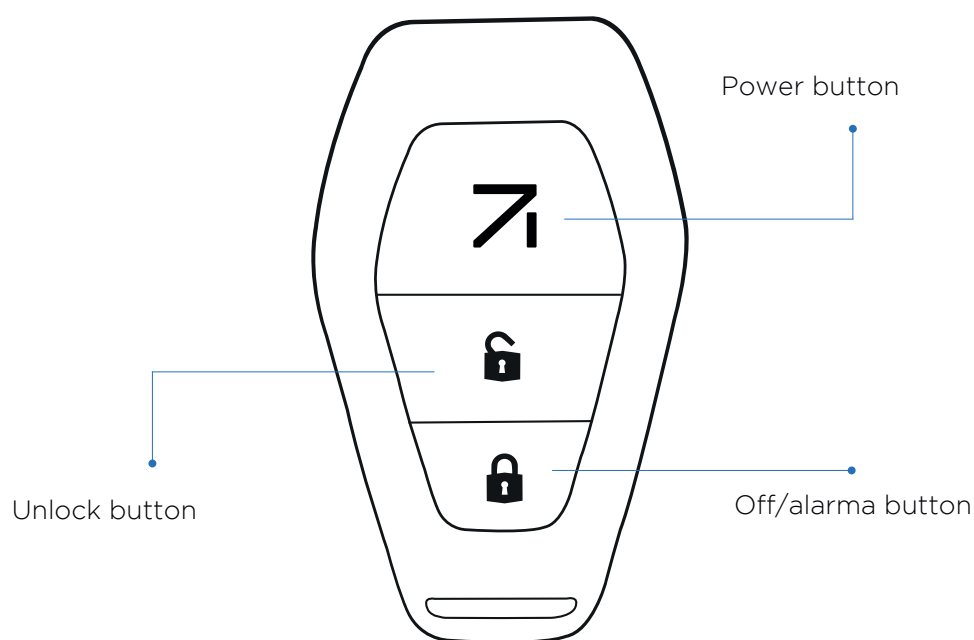

Driving of the control

Initial reference state:

To begin learning the operation of the control, we start with the reference state "vehicle off".

Vehicle off state:

The circuit breaker (switch under the seat) will have to be **ON**.

1. If the led on the cylinder is off and the display is off as well, it means that the motorcycle is off. This state will have been reached by pressing this combination of buttons on the remote. (Off / alarm button, "padlock closed") or asleep (unlock press "padlock open" + wait 15-30 sec.).

On the other hand, if the motorcycle is in the "vehicle on" state, then we have to press the first "padlock open" button and then press the closed padlock to go to the "vehicle off" state. In this state the alarm will be active and any vibration or misuse will sound.

Status "vehicle on"

2. The status of the led on the key cylinder will be flashing. To start the vehicle, press the button with the logo twice

Status "vehicle unlocked or asleep"

3. The status of the led on the key cylinder will be flashing. To start the vehicle, press the button with the logo twice.



If we press the open padlock button, the display will turn off and the cylinder led will be activated. If no more than 15-30 sec. you will be able to move the motorcycle without the alarm going off. For example, to park it in a place that is difficult to access.

4. If you have pressed the open padlock button and 15-30 sec. the motorcycle will go into "sleep state" and when it receives any movement the display will be activated and the rear wheel will be locked. The alarm will not sound in any case.

* Remote seat opening:

In any of the states that we have mentioned above, the remote opening of the seat will take place: Press the open padlock for 3 seconds and the seat will open.


DISPLAY

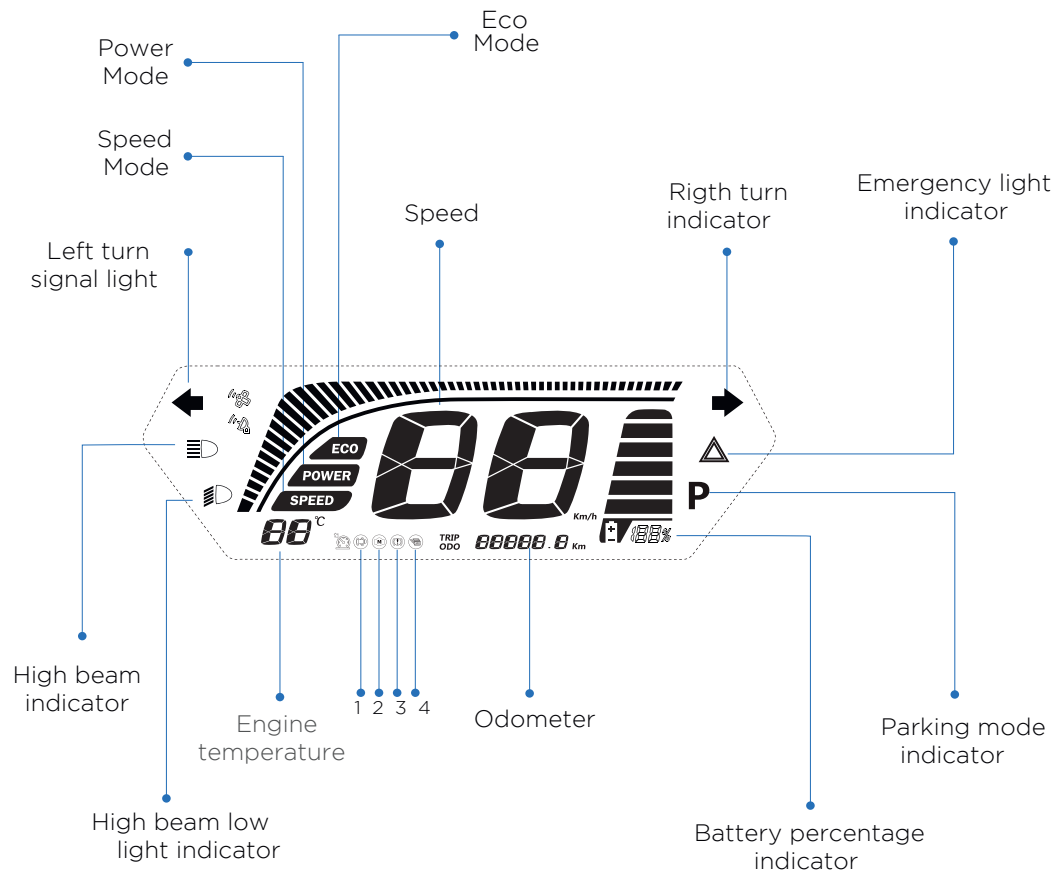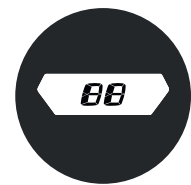


1. Accelerator malfunction
2. Engine failure
3. Brake failure
4. Control failure

Button switches


Left panel

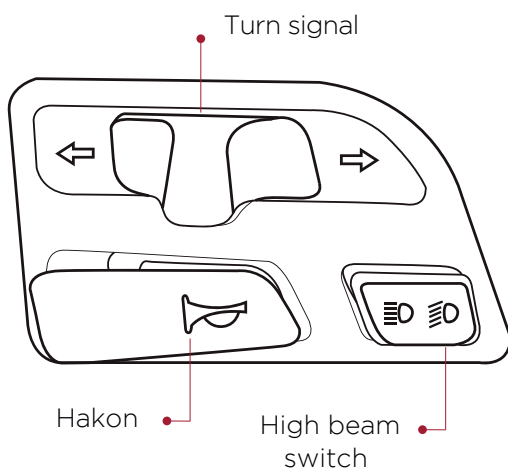

Right panale

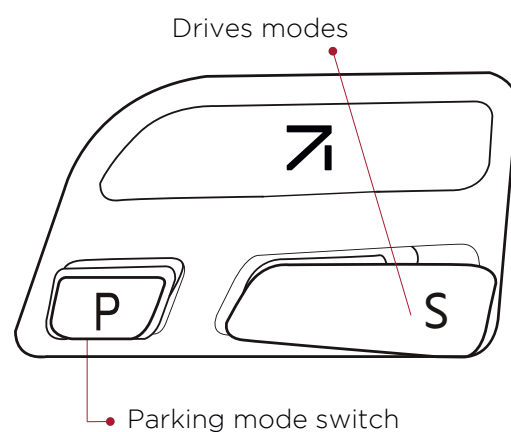


BATTERY

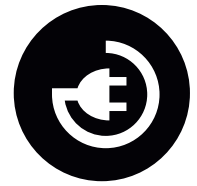

We have 2 charging options on the NX¹


Port Jack directly to the vehicle

Gently press on the top of the cover, where the connector is located, to access the charging socket. Take the charger, plug it in and watch the indicator light that will alert you when charging is complete.

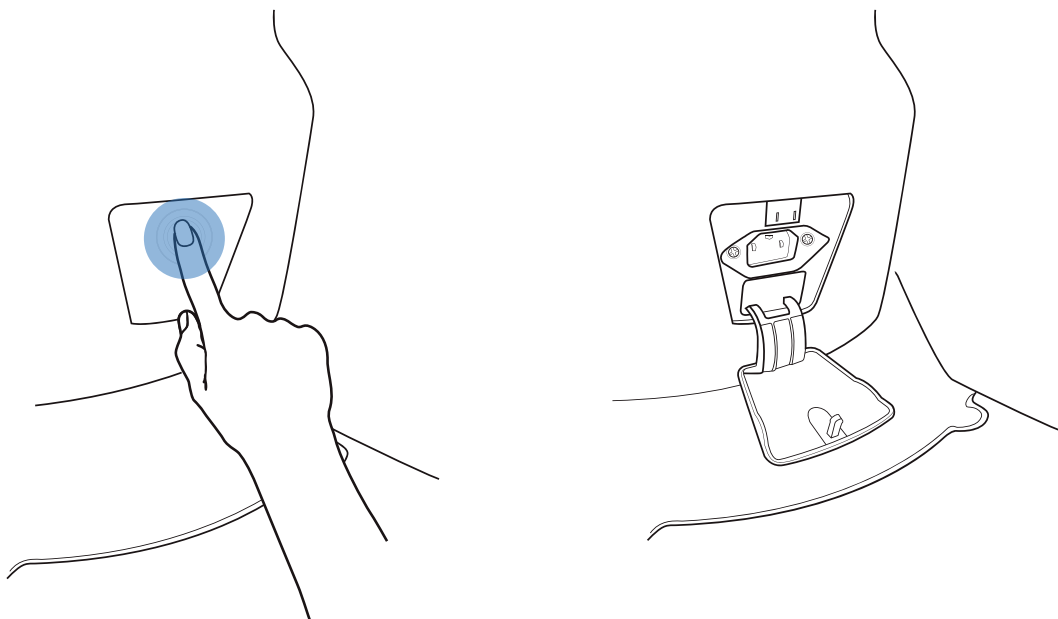

Removable battery

Open the trunk first, then unlock the lock inside the trunk to access the battery compartment. You can remove the lithium battery in order to recharge it where it suits you best. Please charge with the original NEXT charger for lithium batteries and check the charging status with the charger indicator light.

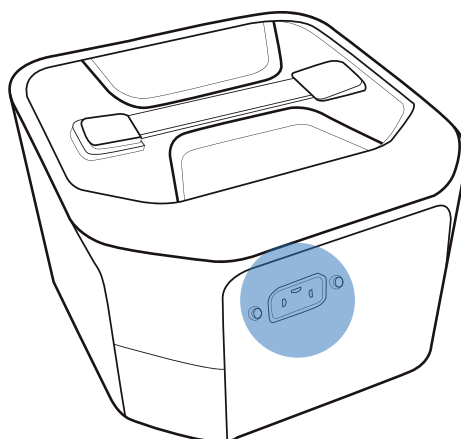

Battery Usage Precautions



①

The battery should always be in a cool, dry place between 10°C~45°C



②

Avoid contact with water, drinks and other corrosive liquids.



③

Do not place the battery near flammable and explosive products.



④

Prevent the positive and negative poles of the battery from touching each other.



⑤


If the battery is hot or deformed, separate it from the vehicle and move away immediately

Battery Charging Precautions



①

It is recommended that the battery charge is between 0°C~35°C

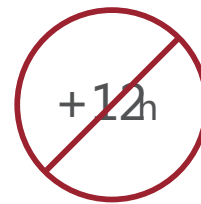

②

Try to pay attention to the charging time and don't leave the charge for more than 12 hours.

Others point to consider

- ① If you have a problem with the battery, do not try to disassemble it for your safety, take it to an official center authorized by NEXT for repair.
- ② Always use the official NEXT charger.
- ③ If the battery has charged for more than 10 hours and has not yet been fully charged, please take it to a NEXT center and without handling it, as it may lose warranty.



NIX¹

- 4 Try not to wait for the battery to discharge completely before recharging it. To maximize battery life, keep the charge level between 20% and 90%.
- 5 We recommend that you charge the battery at least once every 3 months.
- 6 The battery loses capacity at a lower temperature. Specifically, the capacity at -10 ° C is 70%, 80% at 0 ° C and 100% at 25 ° C.
- 7 If you do not use the battery for a long time, we recommend that you store it with a charge level of 50% and remember that the moment you want to use the battery again, you need to charge it to 100%. The battery should always occupy a cool, dry space. Storing it with less than 10% or more than 90% charge level for a long time may irreversibly reduce the battery capacity. If the battery fails due to improper use or lack of maintenance, the warranty is void.

APP MyNEXT



The application will load the information from your NX¹

Available for Android and iOS devices with the following functions

GPS positioning

Anti-theft alarm



Remote management




Ready in 3 steps

- 1 Wear the helmet correctly
- 2 Get into a comfortable riding position
- 3 Turn on your NX¹ and enjoy your ride.

COMPONENTS

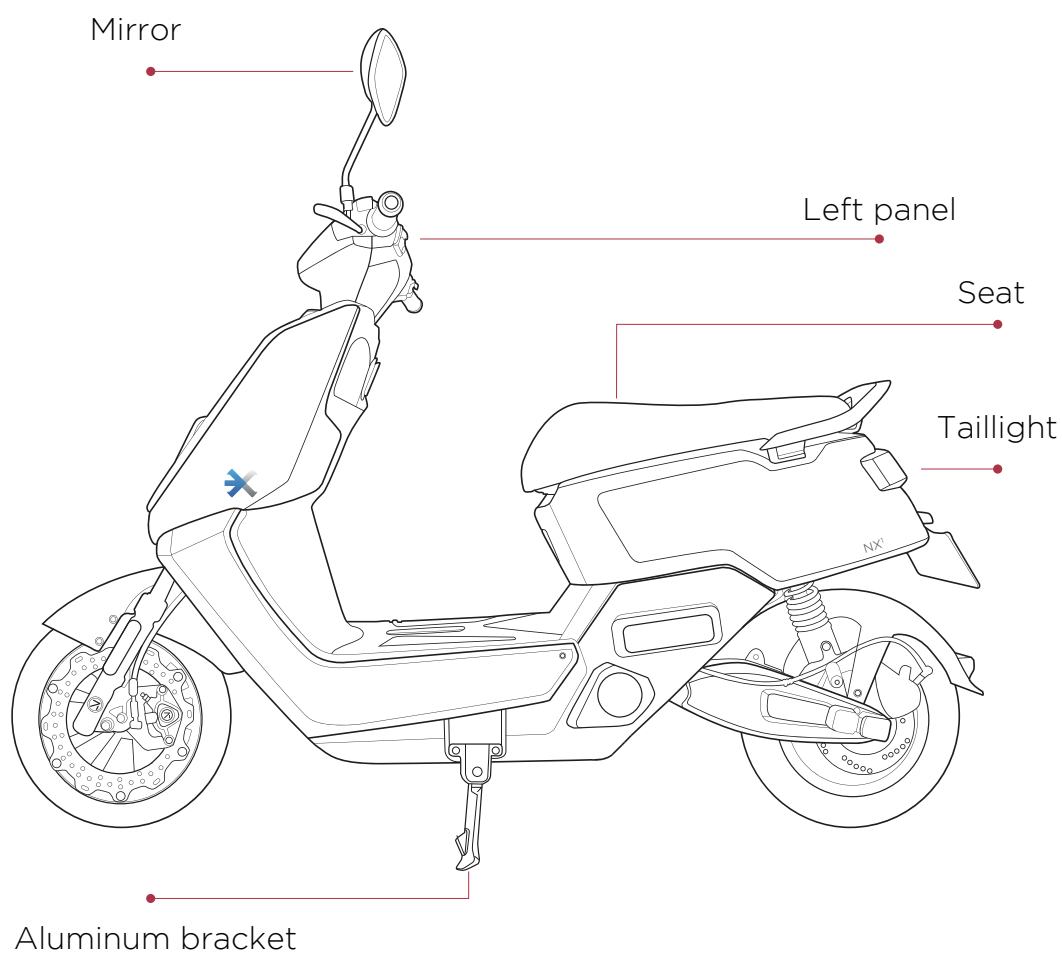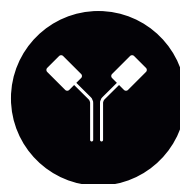

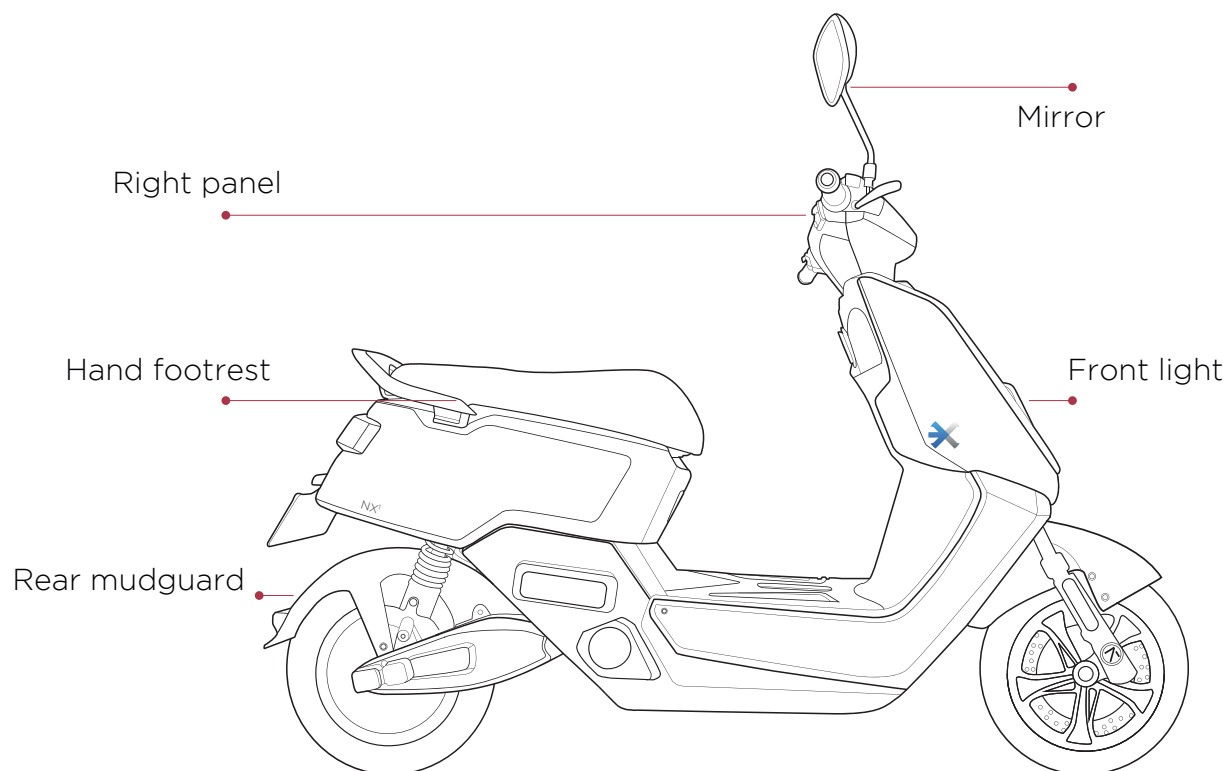


PROBLEMS



Problem	Cause	Solution
If you turn on but cannot start	No power	<ol style="list-style-type: none"> 1. Make sure the battery is connected. 2. If the battery level is low, charge the battery.
Turn on, press the accelerator but the engine does not work	<ol style="list-style-type: none"> 1. Brake applied 2. The vehicle is in parking mode 3. Failure of switch P 	<ol style="list-style-type: none"> 1. Check the condition of the brake lever 2. Check the start switch
Lack of autonomy	<ol style="list-style-type: none"> 1. Discharged battery cycles 2. Insufficient tire pressure 3. Locking the brake lever 	<ol style="list-style-type: none"> 1. Check the charger 2. Check the pressure ($P_n = 250 \text{ Kpa}$) 3. Practice efficient driving 4. Replace the battery
Unable to charge the battery	<ol style="list-style-type: none"> 1. Poor connection of the battery connector. 2. Temperature too high / too low under load. 	<ol style="list-style-type: none"> 1. Check the condition of the plug 2. Wait for the temperature to return to its normal state.
Display is not displayed	<ol style="list-style-type: none"> 1. The vehicle is not switched on 2. Driver failure 3. Display failure 	<ol style="list-style-type: none"> 1. Check the battery power 2. Consult an authorized service
USB is not charging	<ol style="list-style-type: none"> 1. It is not well connected to the USB 2. The connected USB cable is not compliant. 3. The USB charger is damaged 	<ol style="list-style-type: none"> 1. Check the connection and condition of the USB cable 2. Consult an authorized service

MAINTENANCE

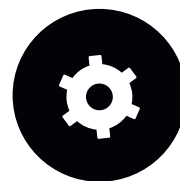

Proper maintenance and use of the vehicle can significantly extend its life. If the vehicle is to be stationary for a long time, please check it regularly.

Regular maintenance

IMPORTANT

It is recommended to perform the first maintenance at the end of the first month or after reaching the first 500 kilometers of use. Then you should check the general condition of the vehicle every 3,000 km. Take these considerations into account as failure to comply with revisions will be the reason for loss of warranty. If you notice an anomaly in the operation, go immediately to an approved center.

Vehicle parking

- 1 Try to park in a cool, dry, level, and stable place.
- 2 Avoid exposing the vehicle to extreme weather conditions to prolong its life.
- 3 Do not use corrosive or alkaline products for cleaning. We recommend that you use water with a neutral detergent.
- 4 If the vehicle is to be stationary for long periods, remember to charge and discharge the battery regularly. Fully charge the battery before using it again

Regular inspection tips

Element	Consejo
Brakes	Check the condition of the brakes: pads, discs, fluid, etc.
Tires	Check the pressure to avoid high consumption
Rims	Take care of the bearings and check that they are not blocked by dirt
Control Panel	Carefully press the switches
Lock	Visualize the locks and avoid the occasional flexibilities.
Alimentation	Check that the cables are not loose or in bad condition
Bolts	Make sure all bolts have factory tightening torque
Battery	Detect signs of battery wear to extend battery life
Charger	Check that the charging cable and connectors are in good condition
Axles	Check axles and their proper lubrication for a smooth ride
Cleaning	Remove any dirt and keep the vehicle clean

After sales service

After-sales service can be carried out in any center authorized by NEXT.

Advice

- 1 Check the condition of your NEXT NX1 and all of its components upon delivery.
- 2 Keep all documentation and packaging delivered to you
- 3 Keep all receipts and invoices for repairs and maintenance.

NEXT official guarantee

- 1 The NEXT NX1 warranty is 2 years or 20,000 km (whichever occurs first) from the first date of purchase. This warranty covers all components of the vehicle with the exception of wearing parts such as tires, brake pads, etc.

Avec cette garantie, NEXT Electric Motors garantit que votre véhicule NEXT est exempt de défauts de matériaux et / ou de fabrication au moment de la première date d'achat. Si des défauts matériels et / ou de fabrication évidents sont découverts pendant la période de garantie, NEXT Electric Motors réparera ou remplacera les pièces et assumera les frais en cas de réparation ou de remplacement.

- 2 During the warranty period, the official service center authorized by NEXT will repair or replace defective components free of charge. If the warranty period is exceeded, the official service center will provide repair and replacement services at the rates in effect at the time of service.

Out of Warranty

The following hypothesis are excluded from the guarantee

- 1 Defects and damage caused by external events, accidents, mainly electrical accidents, wear and tear and use not in accordance with the instructions of NEXT Electric Motors.
- 2 Products modified or repaired by the customer or any other person not authorized by NEXT Electric Motors, as well as products covered by a specific assistance contract.
- 3 Normal wear and tear of parts such as covers, chains, sprockets, chainrings, brakes and hoses in situations where there are no assembly or material faults

- ④ Vehicles whose maintenance or repair is carried out by persons not authorized by the manufacturer or outside NEXT Electric Motors.
- ⑤ Changes from the original condition in which the vehicle was delivered.
- ⑥ The use of NEXT Electric Motors electric vehicles for abnormal, competitive and / or commercial activities or for purposes other than those for which they were designed.
- ⑦ Damage caused by not following the instructions in the owner's manual.
- ⑧ Damage to the paint finish resulting from participation in competitions and / or training for such activities or events or as a result of the exposure or use of NEXT Electric Motors vehicles under conditions or extreme climates.
- ⑨ Damage caused by external agents such as chemicals, salt, oxidation, discoloration or natural deterioration.
- ⑩ Logistics costs, labor for replacement or change.

Maintenance record

Date / Km	Center	Comments



N E X T E L E C T R I C M O T O R S